



Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India

P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com


• Faridabad • Sonipat • Kolkata • Mumbai • Pune • Ahmedabad
• Chennai • Bangalore • Hyderabad

www.prestogroup.com




Colour Matching Cabinet - Spectrum I

PRIMA
SERIES

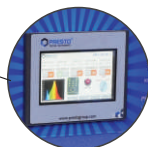


HMI Based
Touch Screen Display

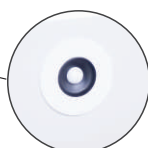

Online Lux Meter



Remote Control

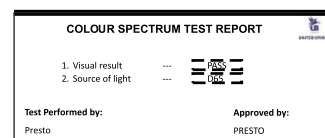

Test Report



Main Screen


MODEL No. PMC 3.0 Prima Series

Presto color matching cabinet Spectrum -1 is a simulation tool, which is mainly used in quality control. The color matching cabinet accurately corrects light types and thus allows direct comparison of products that must have special color characteristics. The color matching cabinet supports five possible lighting types. These colors are supplied as standard: "D65", "TL84", "UV", "CWF" and "TFL"


We have made all these features available to you from latest and fastest Human Machine Interface (HMI). You can generate and download the soft copy of the report in-a-go in pdf format by inserting a USB in the HMI.

We have provided you with the Light to control through remotely .


- Fastest Human Machine Interface (HMI) powered by Cortex-A8 high speed processor
- 45 degree fixture for placement of sample
- USB option available (Pen drive is not a part of supply)
- Can easily be operated with two methods i.e. manual (through touch screen) and remotely.
- Current light running status display
- Can easily programmed cyclic mode define separate time of each light.
- Can generate and download the soft copy of the report in-a-go in pdf format
- CSV format and you can add as much Customize information
- Equipment is added with security layers to allow access only to registered user
- Incorporated with online LUX meter to monitor healthy status of lights
- Standard LUX criteria will be defined and alert message display when it decreases

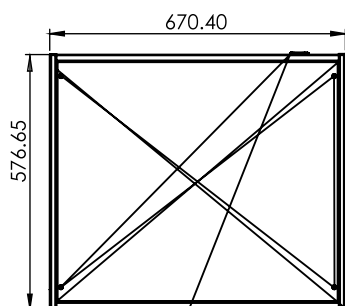

Top View

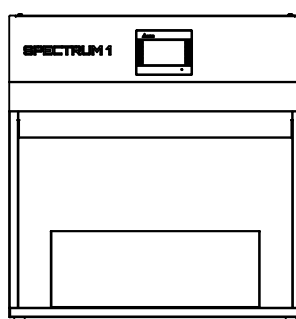

Front View

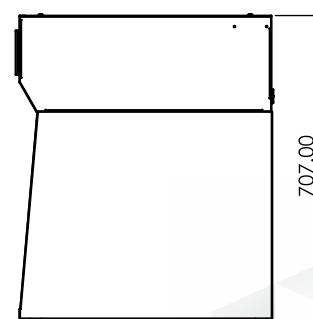

Side View

www.prestogroup.com