



Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India
P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

• Faridabad • Sonapat • Kolkata • Mumbai • Pune • Ahmedabad
• Chennai • Bangalore • Hyderabad


www.prestogroup.com



Notch Cutter (Motorised) For Impact Tester



Accessories

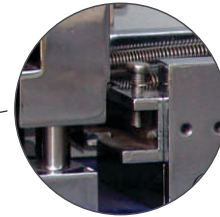


Strong Gripping


Model No. : NC - 22

The PRESTO notch cutter is used for making a notch in the Izod / Charpy samples as per ASTM D 256-10, ISO 180. It is a sample preparation machine that prepares the sample for Izod Tester to test the plastic sheets. The instrument is used to make the notch of the plastic sheets up to 5 mm. The outer body is neatly powder coated with the balanced base.


- Highly accurate Cutting
- Strong gripping fixtures for Izod V-Notch sample preparation
- Cutting system motorised
- V- Notch measurement thought precession micrometer
- Notch depth comparator
- Robust construction, corrosion resistance & high strength

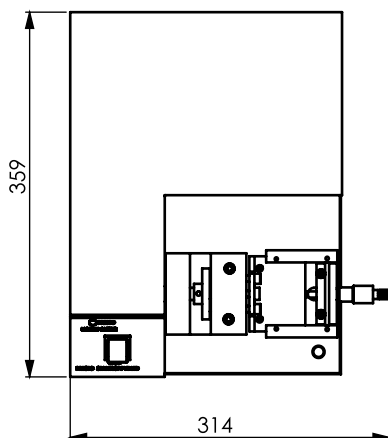

Top View

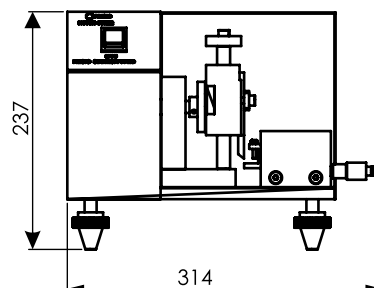

Front View

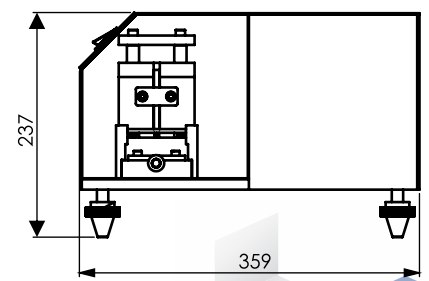

Side View

www.prestogroup.com



Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India

P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

• Faridabad • Sonipat • Kolkata • Mumbai • Pune • Ahmedabad
• Chennai • Bangalore • Hyderabad

www.prestogroup.com



It is noted in ASTM standards that it is extremely critical to produce an accurate cut and to measure the depth and contour of the notch before testing. Result data will be compromised due to poor sample preparation.

Key Specifications:

Angle of Notch	45°
Micrometer Range	0 - 25mm
Micrometer Least Count	0.01mm
Depth of Notch	2.5mm \pm 0.05
Notch Shape	V Shape
Power	220V Ac, 5 Amp., Single phase, 50 Hz
Operation	Motorised
Standard Sample size	12.7 x 64mm

Highlights:

Foot Rest	Yes
Material	Mild Steel
Finish	Powder coated Havel Grey & Blue combination finish and bright chrome / zinc plating for corrosion resistant finish
Dimensions	314 x 359 x 237 mm

Including Accessories

- V - Notch cutter
- Micrometer

Thank you customers for choosing us as your partners in growth !



*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

OUR OTHER PRODUCTS :-

					
Top Load Tester	Wall Thickness Gauge	Gloss Meter Triangle	Eccentricity Tester	Moisture Analyzer MB 45	Preform Neck Cutter