



Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India
P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

• Faridabad • Sonapat • Kolkata • Mumbai • Pune • Ahmedabad
• Chennai • Bangalore • Hyderabad

www.prestogroup.com




Gelbo Flex Tester




GELBO FLEX tester is valuable test in determining the resistance of flexible-packaging materials to flex-formed pinhole failures or measuring the flex durability of flexible barrier materials.


The flexing action consists of a twisting motion followed, in most cases, by a horizontal motion, thus, repeatedly twisting and crushing the film. The frequency is at a rate of 45 cpm. Confirms to ASTM F392.

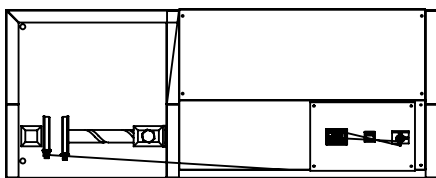

Top view

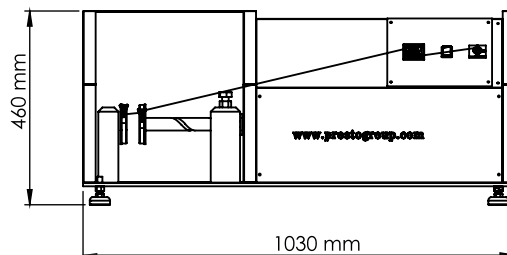

Front view

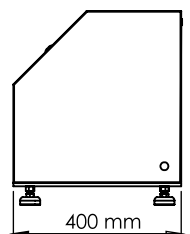

Side view

www.prestogroup.com



Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India

P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

• Faridabad • Sonapat • Kolkata • Mumbai • Pune • Ahmedabad
• Chennai • Bangalore • Hyderabad

www.prestogroup.com



Features :

- Special ring fixtures provided for proper clamping of the test specimen
- Provision of Set number of cycles through Digital Preset Counter
- User-friendly electronic controls
- Motorized mechanism ensures accurate test results.
- Supplied with measuring template
- Microprocessor & LED display

Technical Specifications :

Stroke distance	80 or 155 mm
Twisting angle	400 degree or 440 degree
Twisting frequency/cycle	45 cycles / min
Motor	1/4 HP , 1440 Rpm, Gear Motor
Mandrel diameter	90 mm
Standards	ASTM F392 conditioning levels A-E
Power	230 Vac, 50 Hz

Thank you customers for choosing us as your partners in growth !



*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

OUR OTHER PRODUCTS :-

					
Box Compression Tester	Scuff Resistance Tester	Tensile Tester Digital	Spectrocolorimeter	Cobb Sizing Tester	Digital GSM Balance

www.prestogroup.com

