



Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India
P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

- Faridabad • Kolkata • Mumbai • Pune • Ahmedabad
- Chennai • Bangalore • Hyderabad



Peel Strength Tester Digital cum Computerised (Wintest)



Model No. PPSS-2000 (C) Wintest

Peel Strength Tester Digital cum Computerised is a consistent tool to quantify the permanence of adhesion or peel ability of self-adhesive pressure sensitive materials. PRESTO Peel Adhesion Tester is manufactured under test standard ASTM D 903.

Available in Digital model also.

- Microprocessor based display for accurate test results
- Display for Peel Adhesive strength of test specimen
- Highly accurate test results
- Strong gripping clamps to perform Peel test at 180°.
- Bright LED display
- Inbuilt calibration facility




90° fixture




180° fixture


- 90 degree fixture (Optional) - Available on request



TOP VIEW

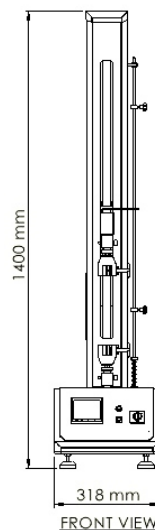

FRONT VIEW

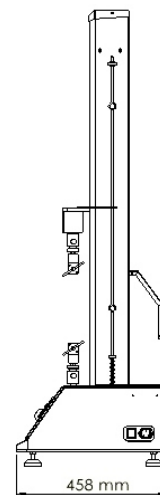

SIDE VIEW



Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India
 P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

- Faridabad • Kolkata • Mumbai • Pune • Ahmedabad
- Chennai • Bangalore • Hyderabad



Peel Strength Tester reveals the peeling strength force required to remove pressure sensitive coated material, which has been applied to standard test specimen under specified conditions from the plate at a specified angle and speed.

Key Specifications:

Load Cell Capacity	20 Kgf
Display	<ul style="list-style-type: none"> • LCD (Digital) • Graphical report
Accuracy	± 0.5 % at full load (with master load)
Least Count/Resolution	0.001 Kgf
Power	220V , Single phase, 50 Hz
Test Speed	Variable with speed Drive
Test Report	10 Sample save in Single Report
Grip Separation	Min. 25 mm & Max. 500 mm
Communication port	RS 232

Feature :

- Feather touch controls
- Easy Data Management. User can create product identification, test details etc.
- Graph test report is Force Vs Time.
- 10 Sample test reports can be seen on one report
- Email facility of report
- Report available in Pdf format
- Data can be tabulated in excel format
- Pass/Fail Criteria can be programmed
- Inbuilt hardware/software CD

Highlights:

Safety Switch	Yes
Material	Mild Steel
Finish	Powder coated Havel Gray & Blue combination finish and bright chrome / zinc plating for corrosion resistant finish
Dimensions	318 x 458 x 1400 mm

* Computer & Printer not a part of the supply

Optional Features :

- Peel Tester Digital cum computerized models and Digital model (with or without printer facility) also available.

Thank you customers for choosing us as your partners in growth !



*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

OUR OTHER PRODUCTS :-

Box Compression Tester Digital cum Computerised	Scuff Resistance Tester	Tensile Tester Digital	Spectrocolorimeter	Cobb Sizing Tester	Digital GSM Balance

