



Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India
P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

• Faridabad • Kolkata • Mumbai • Pune • Ahmedabad
• Chennai • Bangalore • Hyderabad



Peel Strength Tester Digital




Model No. PPSS-2000

Peel Strength Tester is a consistent tool to quantify the permanence of adhesion or peel ability of self-adhesive pressure sensitive materials. PRESTO Peel Adhesion Tester is manufactured under test standard ASTM D 903.

Available in Computerized model also.

- Microprocessor based LCD display for accurate test results $\pm 1\%$
- After completion the test auto home return
- Highly accurate test results under force.
- Strong gripping clamps to perform Peel test at 180° .
- Bright LED display
- Inbuilt calibration facility
- Feather touch controls
- Equipped with ball screw provides enhanced speed control, less noise and consistent test results

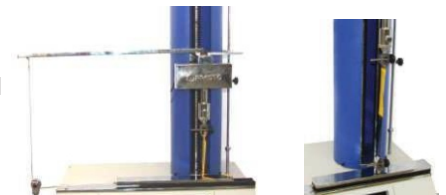


90° fixture

180° fixture

- 90 degree fixture (Optional) - Available on request

Peel Strength Tester reveals the peeling strength force required to remove pressure sensitive coated material, which has been applied to standard test specimen under specified conditions from the plate at a specified angle and speed.

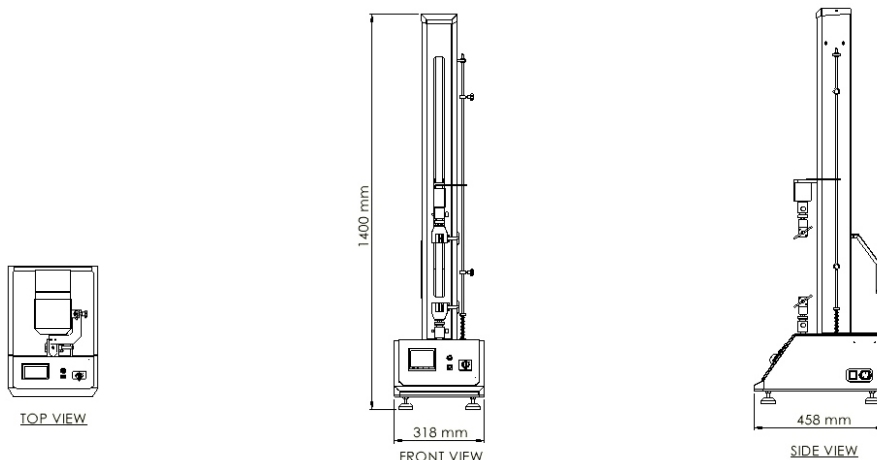



Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India

P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

• Faridabad • Kolkata • Mumbai • Pune • Ahmedabad
• Chennai • Bangalore • Hyderabad



Key Specifications:

| | |
|------------------------|--------------------------------------------------|
| Load Cell Capacity | 20 Kgf |
| Display | Digital LED Display |
| Accuracy | ± 0.5 % at full load (with master load) |
| Least Count/Resolution | 0.001 Kgf |
| Power | 220V , Single phase, 50 Hz |
| Test Speed | Variable through Speed Drive |
| Memory | After perform the test max. value save in memory |
| Grip Separation | Min. 25 mm & Max. 500 mm |

Highlights:

| | |
|------------------|--------------------------------------------------------------------------------------------------------------------|
| Auto Test Stop | Yes |
| Auto Home Return | Yes |
| Safety Switch | Yes |
| Material | Mild Steel |
| Finish | Powder coated Havel Gray & Blue combination finish and bright chrome / zinc plating for corrosion resistant finish |
| Dimensions | 318 x 458 x 1400 mm |

The Peel Strength tester measures the peeling strength required to peel of the laminates.

Optional Features :

- Peel Tester Digital cum computerized models and Digital model (with or without printer facility) also available.

Thank you customers for choosing us as your partners in growth !



*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

OUR OTHER PRODUCTS :-

| | | | | | |
|----------------------------------------------------|-------------------------|------------------------|--------------------|--------------------|---------------------|
| | | | | | |
| Box Compression Tester Digital cum Computerised | Scuff Resistance Tester | Tensile Tester Digital | Spectrocolorimeter | Cobb Sizing Tester | Digital GSM Balance |

